

Operating Instructions

PC Software

PSCS.2 for PSQ-S / AMS.2



Version 2024/05/28

©2024 PS Automation GmbH

Subject to changes!

Content

1. System requirements	4
2. Scope of delivery	4
3. Licence agreement	4
4. Functions	4
5. Installation	4
5.1 Software installation	4
5.2 Connecting the data cable	4
6. Status display	4
7. Tile menu	5
7.1 Parameter	5
7.1.1 Change	5
7.1.1.1 Inputs / Outputs	5
7.1.1.1.1 Set value A	5
7.1.1.1.2 Set value B	7
7.1.1.1.3 Process controller	8
7.1.1.1.4 Actual value	8
7.1.1.1.5 Binary input	8
7.1.1.2 Valve adaption	10
7.1.1.2.1 Valve adaption	10
7.1.1.2.2 Valve curve	11
7.1.1.2.3 Speed curve	11
7.1.1.2.4 Intermediate positions	12
7.1.1.3 Commissioning	12
7.1.1.3.1 Automatic	12
7.1.1.3.2 Manual	13
7.1.1.4 Safety	13
7.1.1.4.1 Error of the Set value A	13
7.1.1.4.2 Torque error	14
7.1.1.4.3 Overtemperature	14
7.1.1.4.4 Loss of supply voltage	14
7.1.1.5 Signal relays	14
7.1.1.6 Diagnosis	15
7.1.1.7 Settings	15
7.1.1.7.1 Language	15
7.1.1.7.2 eLabel	15
7.1.1.7.3 Clock	15
7.1.1.7.4 Display LCD	16
7.1.1.7.5 WIFI	16
7.1.1.8 Fieldbus	16
7.1.2 Parameter export	16
7.1.3 Parameter import	16
7.1.4 Parameter import preview	17
7.1.5 Activation	17
7.2 Local control	17
7.3 Diagnosis	17
7.3.1 Live View	17
7.3.2 Count Log	18
7.3.3 Histogram	18
7.3.3.1 Reaction histogram	18
7.3.3.2 Position histogram	18
7.3.4 Diagnosis Export	19
7.3.4.1 Event Log	19
7.3.4.2 Time Log	19
7.3.4.3 Daily Log	20
7.3.4.4 Count Log Export	20

7.3.4.5 Histogram Export.....	20
7.4 Settings	20
7.4.1 Language.....	20
7.4.2 COM-Port.....	20
7.5 User.....	20
7.6 Help.....	20

1. System requirements

To operate the software PSCS.2 the following computer requirements have to be met:

- Operating system: Windows 7 or Windows 10
- Storage place: approx. 10 MB
- Interfaces: USB

2. Scope of delivery

PSCS.2 package includes the data cable with a special adapter to connect to the actuator as well as a memory stick with the software.

3. Licence agreement

During installation of the software appears a licence agreement. Please read carefully and confirm with OK, if you agree to all points.

4. Functions

The computer software PSCS.2 serves for

- parameterization
- diagnostic
- commissioning
- local control

for smart actuators of PS Automation series PSQ-S und AMS.2.

5. Installation



5.1 Software installation

For software installation use the file „PSCS.2_Setup_Vx.exe“. The software is supplied with the data cable and also available on our website, see “Downloads” – “Software” – “Software PSCS.2”.

Store the setup file on your drive and start the application. An “Install Shield” will guide you through the installation process. You need admin rights to install the software!

5.2 Connecting the data cable

Use the supplied data cable to connect the USB port of your computer with the communication interface of the actuator.

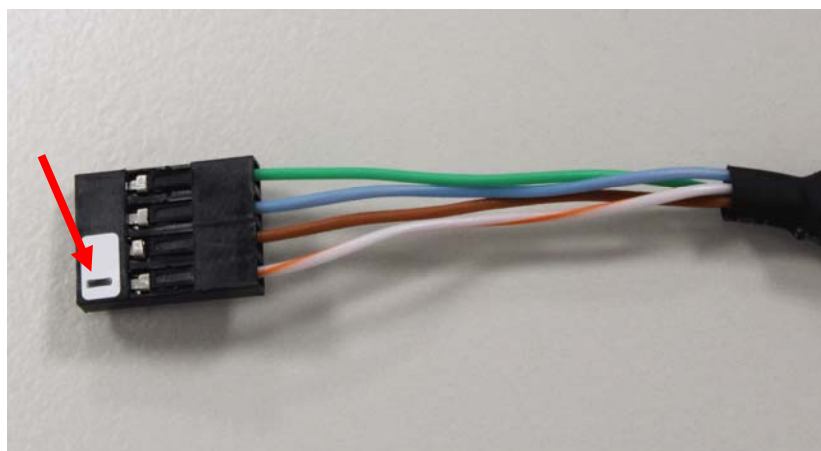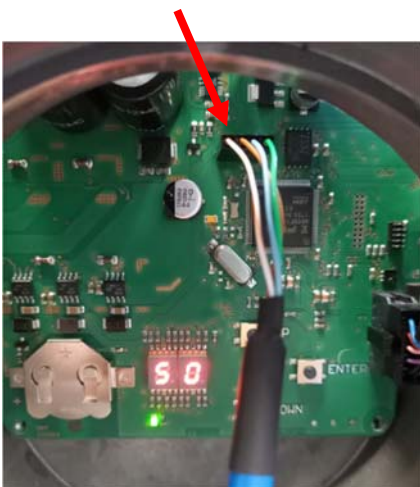

Switch on the power supply of the actuator. Open the Windows Device Manager on your computer and search for the COM port which has been assigned to the driver. Configure the COM port, see chapter 7.4 settings.


6. Status display

The programme connects automatically with the actuator. On the left side of the status display is a green coloured icon indicating successful connection.

COM indicates the number of the selected interface. To adjust the interface, see chapter 7.4.

The displayed user rights depend on the user login, see chapter 7.5. The user rights define the type of tiles which are displayed on the entry page as well as restrictions. "Status" indicates the operating status of the actuator.

7. Tile menu

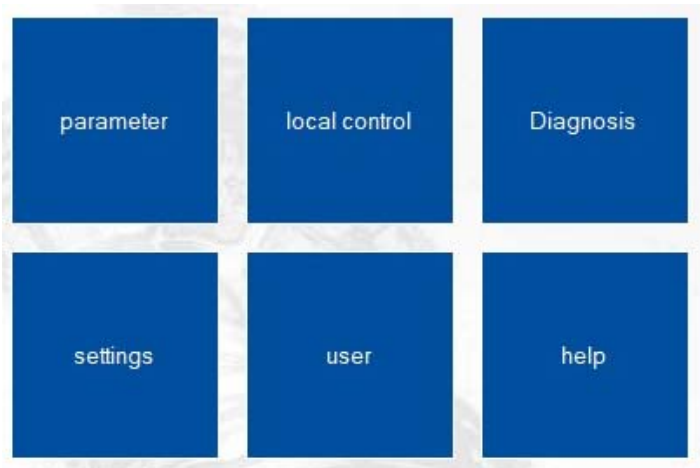

7.1 Parameter

7.1.1 Change

7.1.1.1 Inputs / Outputs

7.1.1.1.1 Set value A

Selection of the set value for position regulation by an external controller.

set value source:	fixed value	▼
-------------------	-------------	---

current		
set value close:	<input type="text" value="4"/>	mA
set value open:	<input type="text" value="20"/>	mA

voltage		
set value close:	<input type="text" value="0"/>	V
set value open:	<input type="text" value="10"/>	V

PWM		
pulse min:	<input type="text" value="5"/>	%
pulse max:	<input type="text" value="95"/>	%

fixed value		
value:	<input type="text" value="500"/>	‰

deadband		
value:	<input type="text" value="5"/>	‰

averaging		
value:	<input type="text" value="1"/>	times

Set value source

Selection of the set value source.

Current

Current selects the set value as analogue current signal in the range 0 mA to 20 mA.

Voltage

Voltage selects the set value as analogue voltage signal in the range 0 V to 10 V.

PWM

In order to use a PWM signal as Run command, the binary input BA must be parameterized as PWM .

Fixed value

Fixed value, e.g. for use in combination with the process controller in the range 0-1000 ‰

Dead band

Setting the trigger threshold in the range of 5-100 ‰ of the max. set value.

Averaging

Averaging of the set value in the range of 1 to 64 times.

7.1.1.1.2 Set value B

Selection of the set value B that can be used for optional functions.

set value source:	current	▼
set value function:	off	▼
current		
set value MIN:	4	mA
set value MAX:	20	mA
voltage		
set value MIN:	0	V
set value MAX:	10	V
fixed value		
value:	500	‰
deadband		
value:	5	‰
averaging		
value:	1	times
process controller		
Kp:	1	
Tn:	5	s/100
operating direction:	negativ	▼

Set value source

Selection of the set value source

Set-value function

Off

Set value B is off

Process controller

Activation of the integrated process controller

Rotational speed regulator

Activation of the integrated rotational speed regulator via set value B, enabling the actuator speed to be continuously adjusted between min. 25% and max. 100%.

Current

Current selects the set value as analogue current signal in the range 0 mA to 20 mA.

Voltage

Voltage selects the set value as analogue voltage signal in the range 0 V to 10 V.

PWM

In order to use a PWM signal as Run command, the binary input BA must be parameterized as PWM .

Fixed value

Fixed value, e.g. for use in combination with the process controller in the range 0-1000 ‰.

Dead band

Setting the trigger threshold in the range of 5-100 ‰ of the max. set value.

Averaging

Averaging of the set value in the range of 1 to 64 times.

7.1.1.1.3 Process controller

Kp

Amplification factor

Tn

Delay time

Working direction

Working direction of the process sensor positive / negative

7.1.1.1.4 Actual value

actual value output:	current	▼
current		
actual value close:	4	mA
actual value open:	20	mA
voltage		
actual value close:	0	V
actual value open:	10	V
source		
value:	actual value	▼

Actual-value output

Active feedback signal of the valve position

Current

Actual-value current can be selected in the range 0 mA to 20 mA.

Voltage

Actual-value voltage can be selected in the range 0 V to 10 V.

Source

Selection of the actual-value source.

7.1.1.1.5 Binary input

The actuator has galvanically isolated binary multi-voltage input ports, BA/BB have a common neutral line connection COM. BC is galvanically isolated from BA/BB.

If a voltage is present at a binary input port, the actuator drives to the parameterized position regardless of the analogue or digital set value applied.

The prioritization is implemented from BA (highest priority) to BC (lowest priority). Exception when parametrizing BA PWM.

input BA
value: open

input BB
value:

input BC
value: close

input FS
value:

default

binary inputs
direct value:

BA

Selection of the function for the binary input

BB

Selection of the function for the binary input

BC

Selection of the function for the binary input.

FS

Display of the fail-safe function in combination with PSCP.

7.1.1.2 Valve adaption

7.1.1.2.1 Valve adaption

closing direction:	right turning	▼
deactivation valve open:	position	▼
deactivation valve close:	position	▼
revolutions/ stroke/angle:	<input type="text" value="104"/>	U/mm/°
torque:	<input type="text" value="100"/>	%
start-up		
start torque:	<input type="text" value="100"/>	%
start-up duration:	<input type="text" value="0"/>	ms
entry		
entry valve open:	<input type="text" value="98"/>	%
entry valve close:	<input type="text" value="2"/>	%
limitation		
limitation valve open:	Aus	▼
limitation valve close:	Aus	▼
speed		
speed:	<input type="text" value="100"/>	%
speed fail safe:	<input type="text" value="100"/>	%
torque evaluation:	current	▼

Close direction

Selection of the close direction of the actuator.

Cut-off valve OPEN: "Position" or "Torque"

Cut-off in the open position of the valve.

Cut-off valve CLOSE

Cut-off in the closed position of the valve.

Angle

Valve travel in degrees. Adjustable angle: min. 10° and max. 108°.

Note: For automatic commissioning with two torque dependent end positions, this value is calculated by the actuator.

Torque

The operation torque can be adjusted between 30% and 100% of the actuator nominal torque.

Torque increase

The torque increase can be adjusted between 30% and 120% of the actuator nominal torque. The torque increase is only active, if the torque increase time is adjusted to more than 0 ms. Please note that the torque increase has to be adjusted separately from the torque.

The time during which the torque increase is active: range 0-2000 ms.

Shut off

Shut-Off Valve OPEN

Shut-off range 80-100%, which will be used to drive to the end position during a torque shut-off.

Shut-Off Valve CLOSE

Shut-off range 0-20%, which will be used to drive to the end position during a torque shut-off.

Limiting

Limit valve OPEN

End position limit 80-100%, which will not be exceeded after set-up.

OFF: No limit active.

Limit valve CLOSE

End position limit 0-20%, which will not be exceeded after set-up.

OFF: No limit active.

Speed

Global rotational speed limiting as upper limit of the characteristic curve for rotational speed as well as the rotational speed, which will be used during fail-safe operation regardless of the characteristic curve for rotational speed or the rotational speed regulator.

Torque control

Current


Evaluation of the motor current for torque measurement.

Sensor

Evaluation of a sensor for torque measurement.

7.1.1.2.2 Valve curve


The relationship between the command variable and the valve position/characteristic can be adapted by means of characteristic curve. There are 11 grid points available for this. A linear relationship is set as standard when shipped.

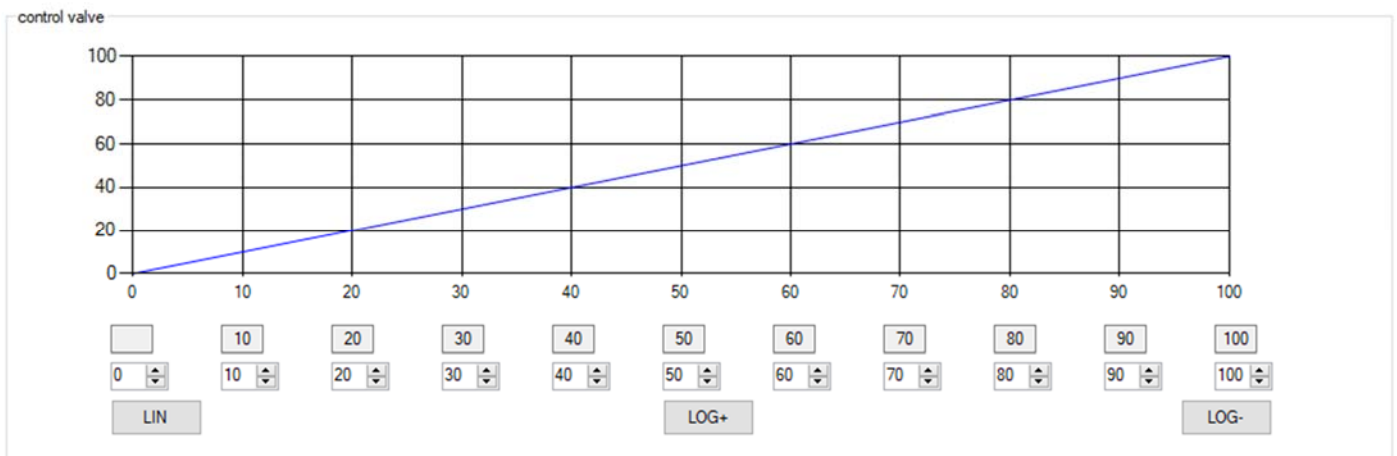

There are additionally three pre-allocated characteristic curves available LIN / LOG+ /LOG-.

7.1.1.2.3 Speed curve

The rotational speed of the actuator can be parameterized with 11 grid points between the minimum rotational speed and the global rotational speed limit, enabling individual settings to be implemented for gentle valve actuation. A straight-line relationship depending on the global rotational speed limit is set as standard, refer to the chapter 7.1.1.2.1. "Valve adaptation". The rotational speed can be adjusted between 25% and 100%.

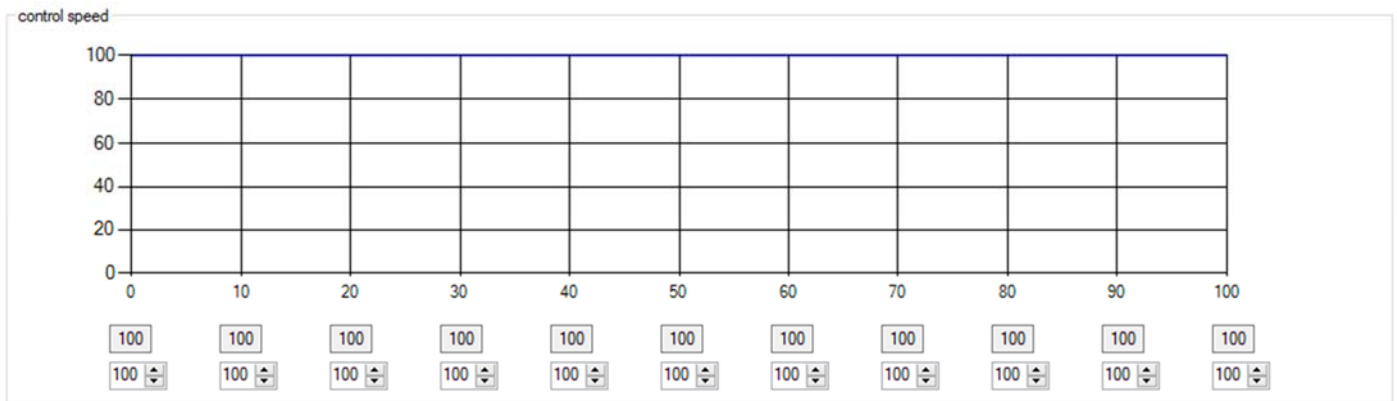

7.1.1.2.4 Intermediate positions

The set intermediate positions can be selected with the safety functions or binary inputs and the actuator drives to these positions.

Setting the Positions 1-5 in the range 0-100%:

position 1 %

position 2 %

position 3 %

position 4 %

position 5 %

7.1.1.3 Commissioning

The actuator can automatically determine the valve end positions depending on the shut-off set or they can be set manually.

7.1.1.3.1 Automatic

If at least one valve end position is set to torque, the commissioning can be automatically carried out.

The actuator runs through the stroke range of the valve with reduced speed in the parameterized direction valve OPEN and/or valve CLOSE. If a torque is detected, the actuator saves this position.


If both end positions have been parameterized to torque, the actuator automatically determines the intermediate angle.

If only one end position has been parameterized to torque, the actuator adds the pre-adjusted angle from the recognized torque position. In doing so, the actuator does not check whether the parameterized angle is too large for the remaining range.

The commissioning is started with "start automatic commissioning".

7.1.1.3.2 Manual

If both valve end positions are set to position, the commissioning must be carried out manually.

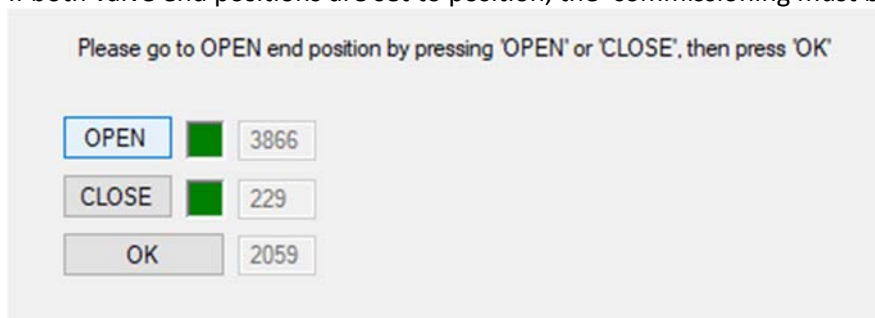

Note: The end position calculated on the basis of the angle during the automatic valve compensation can be adjusted with this setting. After that the angle will be recalculated.

Setup Manual-OPEN

Driving to the Position with Open / Close. In order to save press "OK".

Setup Manual-CLOSE

Driving to the Position with Open / Close. In order to save press "OK".

7.1.1.4 Safety

set value A error	stop	▼
-------------------	------	---

torque error	new try	▼
--------------	---------	---

over-temperature	speed reduction	▼
------------------	-----------------	---

power failure	close	▼
---------------	-------	---

default		
---------	--	--

7.1.1.4.1 Error of the Set value A

If the analogue set value lies 50% below the value of the minimum set value, one of the following safety functions can be carried out:

- OPEN
- CLOSE
- Stop
- Position 1
- Position 2
- Position 3
- Position 4
- Position 5

Note: The function is deactivated, if a set value range of 0-20 mA or 0-10 V has been selected.

7.1.1.4.2 Torque error

If the maximum torque is reached in the direction of an end position outside the shut-off for a certain time, the following safety functions can be selected:

- Stop
- Retry

With the "Retry" setting, the actuator tries twice to overrun a detected blockage with maximum torque. If this does not work, the actuator stops and reports a torque error.

7.1.1.4.3 Overtemperature

If the temperature monitoring system reaches the 70°C warning threshold, the following safety functions can be selected:

- Rotational-speed reduction
- OPEN
- CLOSE
- Stop
- Position 1
- Position 2
- Position 3
- Position 4
- Position 5

Note: If "Rotational speed reduction" is selected, the actuator continues to run with the lowest rotational speed possible. If the temperature reaches the shut-off threshold 75°C during continued operation, the actuator stops.

7.1.1.4.4 Loss of supply voltage

In case of a failure of the supply voltage, one of the following safety functions can be selected:

- OPEN
- CLOSE
- Stop
- Position 1
- Position 2
- Position 3
- Position 4
- Position 5

Attention: The function requires that the PSCP option is installed in the actuator!

7.1.1.5 Signal relays

5 potential-free signal relays with NC and NO contacts are available for reporting the events. The events can be assigned with the checkboxes.

relay 1:	<input type="checkbox" value="1"/>	position 1	▼
relay 2:	<input type="checkbox" value="1"/>	position 2	▼
relay 3:	<input type="checkbox" value="1"/>	position 3	▼
relay 4:	<input type="checkbox" value="0"/>	position 4	▼
relay 5:	<input type="checkbox" value="0"/>	position 5	▼
default			

The actual switching state of the signal relay is indicated with Red 0 /Green 1.

7.1.1.6 Diagnosis

The recording rate for time logging can be set between 10 and 3600 seconds, see chapter 7.3.4.2.

Diagnosis

logging time: s

7.1.1.7 Settings

7.1.1.7.1 Language

Changeover of the menu language for the PSC.3 parameter menus and message texts.

language ▼

7.1.1.7.2 eLabel

The eLabel provides specific actuator data.

The valve number between 0 and 999999 can be entered by the customer in the numeric form.

e-Nameplate

serial number:	<input type="text" value="000050"/>
valve number:	<input type="text" value="00000"/>
FW-version:	<input type="text" value="01"/> . <input type="text" value="01"/> . <input type="text" value="34"/>

7.1.1.7.3 Clock

Setting menu for the time/date. The clock is used to make accurate timestamps when recording messages during logging.

The clock has a battery backup and continues to run in the event of a mains power failure.

Click "time setting" to apply the actual time and date.

<input type="text" value="12"/>	:	<input type="text" value="38"/>
<input type="text" value="10"/>	<input type="text" value="2"/>	<input type="text" value="2021"/>
day	month	year
<input type="button" value="time setting"/>		

7.1.1.7.4 Display LCD

Parameterization of the Local control PSC.3.

display: percent

source: actual value

Display

Display of the actuator position in % (percent) or in ° (angle).

Source

Source of the display is the actuator position / actual value or the actual process value.

7.1.1.7.5 WIFI

ON: Wi-Fi is switched on permanently.

OFF: Wi-Fi is switched off.

Auto: Wi-Fi switches OFF automatically if no one is logged on at the actuator or if there is no activity for a defined period of time. This prevents the actuator having a permanent Wi-Fi connection.

IP address: IP address of the actuator can be changed

SSID: SSID of the actuator wireless network

Password: password to connect with the actuator

Important: If WIFI and LAN are used simultaneously, please assign a different address on a computer for WIFI to avoid address conflicts, for example use 192.168.1.x for LAN and 192.168.2.x for WIFI.

WIFI

on off auto

on/off: 1

connected: 1

IP address: 192 . 168 . 1 . 1

SSID: PSQS-000050

password: 0941381577

7.1.1.8 Fieldbus

Parameter menu for fieldbus-specific addresses and settings.

7.1.2 Parameter export

Export of a complete parameter data set from the actuator to a storage medium

parameter export

File: AMS2.x_[serial number]_[date_time]_PA.csv

7.1.3 Parameter import

Import of a complete parameter data set from a storage medium into the actuator.

parameter import

File: AMS2.x_[serial number]_[date_time]_PA.csv

7.1.4 Parameter import preview

Import of a complete parameter data set from a storage medium for preview. The parameter data set is not transferred to the actuator.

Parameter Import Vorschau >

7.1.5 Activation

Optional functions can be activated with an activation code.

Activation code:

Activate

PWM port locked

Speed regulator locked

Process controller PSIC locked

Please contact your sales team.

7.2 Local control


Local control of the actuator. The actuator can be driven between the saved valve positions by closing / opening. Display of the actuator position next to the buttons.

open close 56

7.3 Diagnosis

7.3.1 Live View

Chart on input / output signals and parameterization of the process controller.

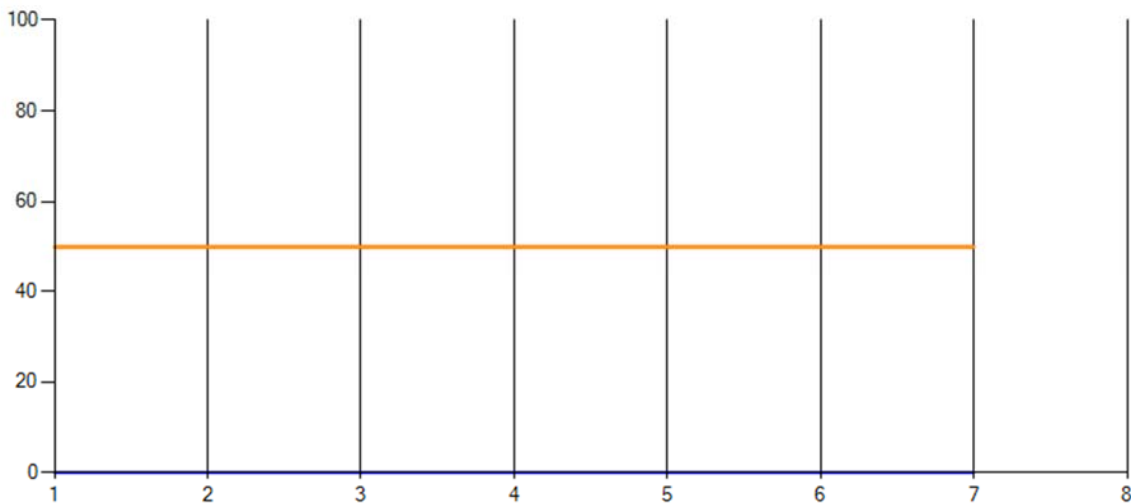

Betriebsart: Automatik

Seriennummer: 50

refresh start stop 1

<input checked="" type="checkbox"/> set value A	<input type="text" value="50"/>	%	<input type="checkbox"/> BA	<input type="text" value="0"/>	%
<input checked="" type="checkbox"/> set value B	<input type="text" value="0"/>	%	<input type="checkbox"/> BB	<input type="text" value="0"/>	%
<input checked="" type="checkbox"/> Istwert	<input type="text" value="50"/>	%	<input type="checkbox"/> BC	<input type="text" value="0"/>	%
position	<input type="text" value="1747"/>		<input type="checkbox"/> Torque	<input type="text" value="0"/>	%

To show the chart tick the checkbox in front of the respective display value. The recording rate can be set between 0.5 and 10 seconds, see drop down button „Recording-interval“.

7.3.2 Count Log

Indication of the diagnosis counter:

serial number:	0000050
operating time:	42 h
start ups	482
tuned on:	33
driving angle:	14400 °


Operating time: total operation time in hours.

Start up's: total number of start-ups.

Turned on: counts, how often the actuator was switched on.

Driving angle: total number of all driven angular degrees.

7.3.3 Histogram

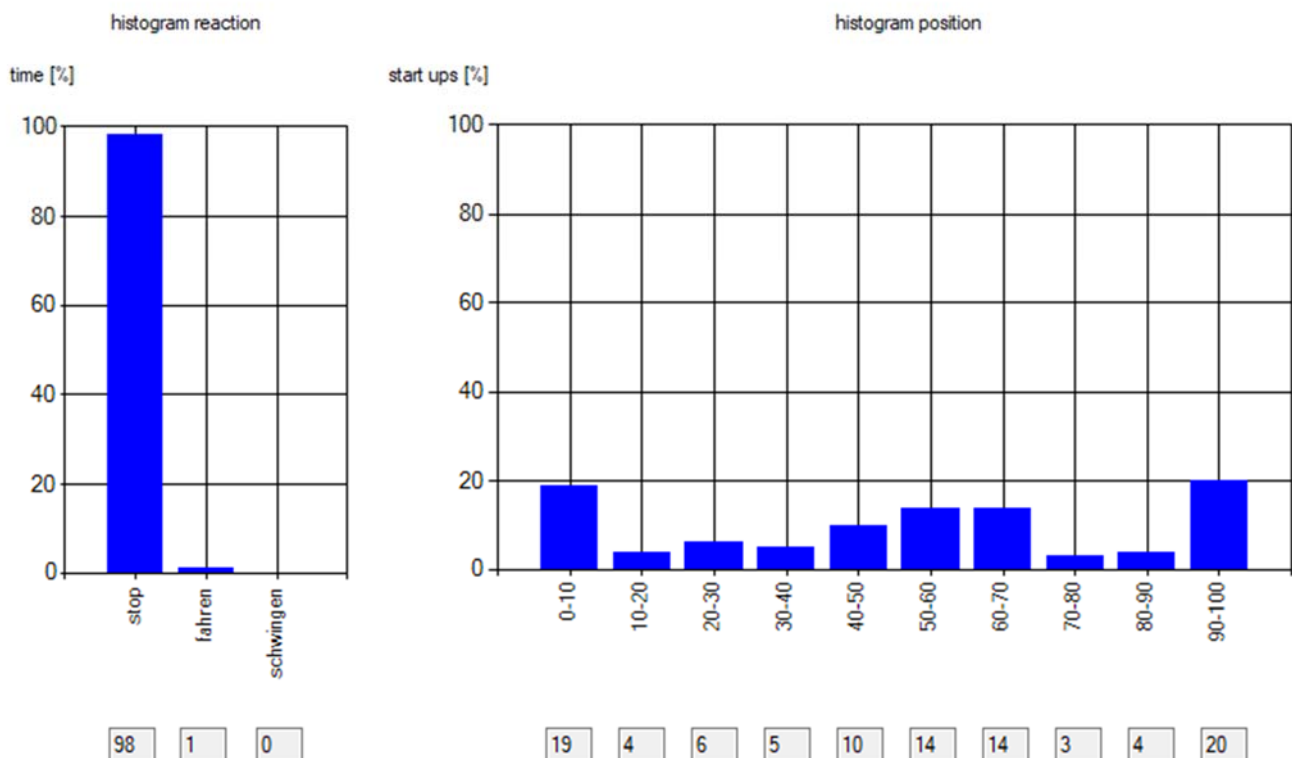

7.3.3.1 Reaction histogram

The histogram shows how long the actuator stops, drives or oscillates in relation to the total operation time.

7.3.3.2 Position histogram

The histogram shows how often the actuator stops in a certain position in relation to the total number of start-ups.

7.3.4 Diagnosis Export

The diagnosis export function enables reading and storing the saved diagnosis data.

Nr.	Adresse	Sektor	Log	Datum	Uhrzeit	Event	Info
1	0	0	000001	08.03.2021	12:03:44	Power-On	Ser.Nr.: 000050 Firmwareve
2	16	0	000002	00.03.2021	08:02:04		
3	32	0	000003	00.03.2021	08:02:08	Parameter-Change	Par.Nr.: 00000 Par.Val.:0000
4	48	0	000004	00.03.2021	08:02:00		
5	64	0	000005	00.03.2021	08:01:48		
6	80	0	000006	00.03.2021	08:01:52		
7	96	0	000007	00.03.2021	08:01:54		
8	112	0	000008	00.03.2021	08:01:48		
9	128	0	000009	00.03.2021	08:01:50		
10	144	0	000010	00.03.2021	08:01:51		
11	160	0	000011	00.03.2021	08:00:06		
12	176	0	000012	00.03.2021	08:00:16		
13	192	0	000013	00.03.2021	08:00:18		
14	208	0	000014	00.03.2021	08:00:21		
15	224	0	000015	00.03.2021	08:00:20		
16	240	0	000016	00.03.2021	08:00:21		
17	256	0	000017	00.03.2021	08:00:23		

The recorded data are listed in a table with time and date and can be stored as *.csv file.

Note: Please check the clock settings for accurate recording, see chapter 7.1.1.7.3.

7.3.4.1 Event Log

The actuator saves maximum 25600 logs that occur during operation:

- Power-On
- Parameter-Change
- Sysmode, selector switch
- Error records
- Valve setup started/event
- WIFI connected/disconnected
- Signal relays

file: AMS2.x_[Serialnumber]_[Date_Time]_DE.csv

7.3.4.2 Time Log

At adjustable intervals the actuator cyclically saves maximum 153000 logs of the current condition as well as of set value/actual value, see chapter 7.1.1.6.

file: AMS2.x_[Serialnumber]_[Date_Time]_DY.csv

7.3.4.3 Daily Log

Every 24 hours the actuator automatically saves the condition of the internal operating counter and calculates the histograms.

file: AMS2.x_[Serialnumber]_[Date_Time]_DD.csv

7.3.4.4 Count Log Export

Export of the actual count values.

file: AMS2.x_[Serialnumber]_[Date_Time]_DZ.csv

7.3.4.5 Histogram Export

Export of the actual histogram values.

file: AMS2.x_[Serialnumber]_[Date_Time]_DH.csv

7.4 Settings

language	english	▼
COM port	7	▼

7.4.1 Language

Setting the language.

7.4.2 COM-Port

Select the COM port used in connection with a data cable.

7.5 User

User administration. Not all functions are available without logging in.

If you are not logged in, you can only view parameters but you cannot modify them. This is indicated in the respective menu with a padlock.

Password:	<input type="password"/>
rights:	<input type="text" value="service"/>
	<input type="button" value="login"/>

Please contact your sales team.

7.6 Help

Release notes

version number	V0.9
info	For AMS.2 Firmware V0.1.62 or higher User: Hampel Domain: LAPTOP-HAMPEL
copyright	PS Automation GmbH
service phone number	0049-6322-949800

Great Britain

IMTEX Controls Ltd.
Unit 5A, Valley Industries,
Hadlow Road
GB-Tonbridge, Kent TN11 0AH
Tel.: <+44> (0) 17 32-85 03 60
Fax: <+44> (0) 17 32-85 21 33
Email: sales@imtex-controls.com
www.imtex-controls.com

Italy

PS Automazione S.r.l.
Via Pennella, 94
I-38057 Pergine Valsugana (TN)
Tel.: <+39> 04 61-53 43 67
Fax: <+39> 04 61-50 48 62
Email: info@ps-automazione.it

India

Behind Dhiraj Heavy Equipment,
Narhe Industrial Area
Sr No 25, Hissa No. 8, Dambar Plant Road
IN-411048 Narhegaon, Tal. Haveli, Pune
Tel. : <+ 91> 20 25 47 39 66
Fax : <+ 91> 20 25 47 39 66
Email : sales@ps-automation.in
www.ps-automation.in

Hong Kong

MaxAuto Company Ltd.
Room 2008, 20/F., CCT Telecom Building
11 Wo Shing Street
Fotan, Shatin, Hong Kong
Tel.: <+852> 26 87-50 00
Fax: <+852> 81 01-37 43
Email: info@maxonic.com.hk
www.maxonicauto.com

China

Shenzhen Maxonic Automation
Control Co., Ltd.
Maxonic Automation Control Mansion
No. 3 Lang Shan Road, Hi-Tech Industrial Park,
Shenzhen, Guangdong, PRC.
518057
Tel.: <+86> 755 86 25 03 88
Fax: <+86> 755 86 25 03 74
Email: cg@maxonic.com.cn
www.maxonicauto.com

PS Automation GmbH

Philipp-Krämer-Ring 13
D-67098 Bad Dürkheim

Phone: +49 (0) 6322 94980 – 0
E-mail: info@ps-automation.com
www.ps-automation.com



